
TURFMATE™ UNDERLAYMENT

Installation Instructions

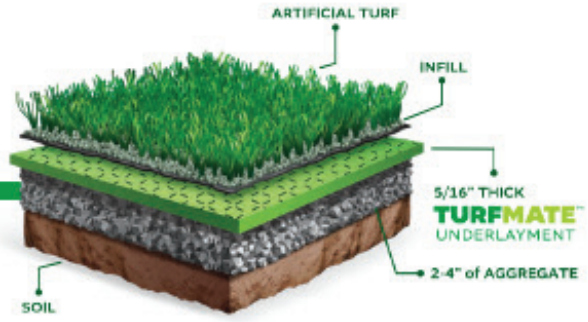

Before You Begin

Read all instructions before installation. Ensure proper drainage and a stable subgrade. Professional installation is recommended for large or uneven areas.

Recommended Tools

Utility Knife • Measuring Tape • Plate Compactor • Landscape Rake • Wheelbarrow • Push Broom

Recommended Materials

Aggregate Base • Artificial Turf • TurfMate™ Seaming Tape • Infill Material • Landscape Nails or Turf Spikes



1. Prepare The Ground

Remove grass, debris, weeds, and loose material. Excavate the area to allow for the aggregate base, TurfMate™ Underlayment, and turf system. Grade and compact the subgrade for proper drainage.

Important: TurfMate™ Underlayment is not a replacement for proper drainage preparation.



2. Add Aggregate Base

Spread and compact 2"–4" of crushed rock or aggregate base. Ensure the surface is smooth and free of sharp objects.



3. Install TurfMate™ Underlayment

Roll out TurfMate™ across the prepared base and trim as needed. Extend approximately 2" beyond the turf perimeter before final trimming. Butt seams tightly together and secure with TurfMate™ Seaming Tape if needed.

Important: No weed barrier is required beneath TurfMate™ Underlayment.



4. Install Artificial Turf

Position turf over the underlayment and allow it to settle before trimming and securing edges according to turf manufacturer recommendations.



5. Infill & Finishing

Apply infill evenly and brush turf fibers upright. Inspect seams and edges before use.

Important Information & Disclaimers: Installation methods may vary by site conditions and turf system. Proper drainage is required for best performance. Improper installation or drainage may affect product performance and warranty coverage. For pet applications, weed barriers are not recommended beneath TurfMate™ Underlayment.